

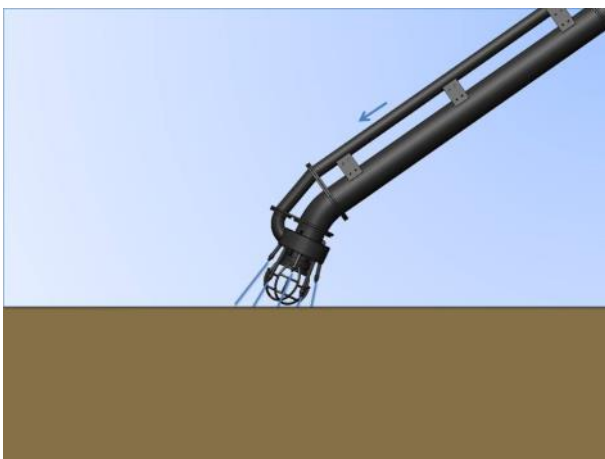
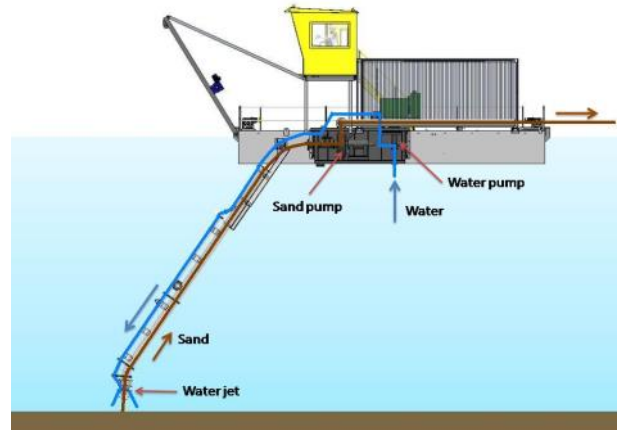



Waterjet Principle

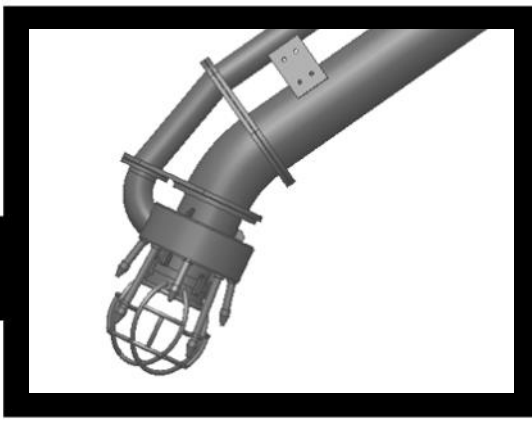


1. Position the waterjet and start the waterflow.

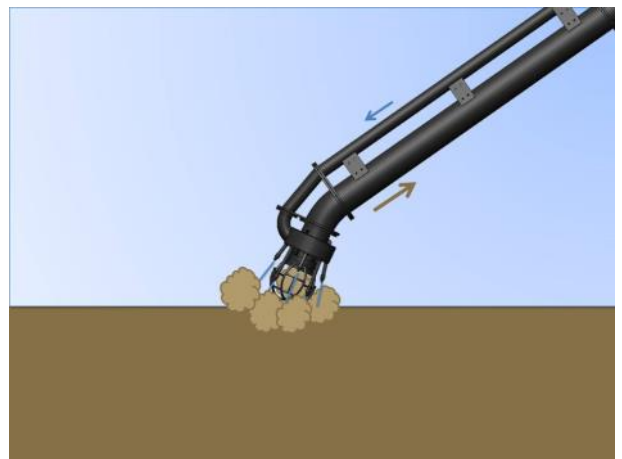

2. The waterflow will open the compact bottom and the sand will be pumped up.

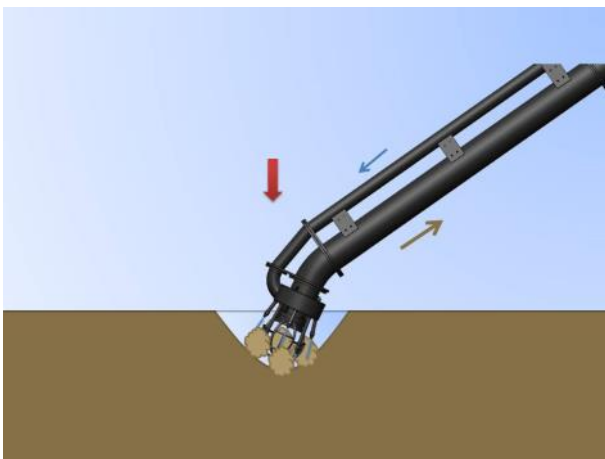

3. The sand will be pumped through the suction pipe and a hole will be generated.

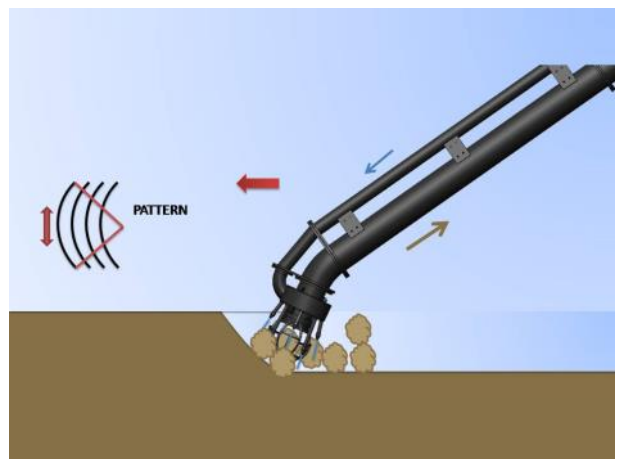

4. Then start the sandsucking according to the pattern.